

# TECHNICAL SPECIFICATION: ZRH 12 REMOTE CONTROL



## I. DESCRIPTION

The ZRH 12 remote control is intended for remote operation of accessories compatible with the Z-Wave standard. It allows to control a maximum of 12 devices in each of 12 groups (total of 144 devices). Currently chosen group is marked with a number on the display.

## II. COMPATIBILITY WITH FAKRO PRODUCTS

The ZRH12 remote control can operate the following FAKRO accessories:

- Actuator: ZWS12, ZWS230
- Automation set: ZWZ230
- Roller shutter: ARZ Z-Wave, ARZ Solar
- Awning blind: AMZ Z-Wave, AMZ Solar
- Vertical awning blind: VMZ Z-Wave, VMZ Solar
- Vertical roll-up awning VMB Z-Wave, VMB Solar
- Internal blackout blind: ARF Z-Wave, roller blind: ARP Z-Wave
- Venetian blind: AJP Z-Wave
- Window: FTP-V Z-Wave, FTU-V Z-Wave
- Flat roof window: DEC Z-Wave, DEF Z-Wave
- Devices of other manufacturers compliant with the Z-Wave standard

## III. AVAILABLE FUNCTIONS

- **INCLUDE** (adding device to network)
- **ASSOCIATE** (adding device to group)
- **COPY GROUP**
- **ASSIGN A ROUTE** (adding distant device)
- **LISTENING MODE**
- **LEARN MODE**
- **DELETE NODE** (removing device from group)
- **DELETE GROUP**
- **EXCLUDE** (removing device from network)

## IV. Z-Wave Device Classes

<b>Basic Device Class:</b>	BASIC_TYPE_CONTROLLER
<b>Generic Device Class:</b>	GENERIC_TYPE_GENERIC_CONTROLLER
<b>Specific Device Class:</b>	SPECIFIC_TYPE_PORTABLE_REMOTE_CONTROLLER


## V. Z-Wave Command Classes

<b>Command Classes:</b>	COMMAND_CLASS_ZWAVEPLUS_INFO COMMAND_CLASS_BATTERY COMMAND_CLASS_VERSION COMMAND_CLASS_POWERLEVEL COMMAND_CLASS_ASSOCIATION COMMAND_CLASS_ASSOCIATION_GRP_INFO COMMAND_CLASS_MANUFACTURER_SPECIFIC COMMAND_CLASS_DEVICE_RESET_LOCALLY COMMAND_CLASS_WAKE_UP
-------------------------	---

## VI. TECHNICAL SPECIFICATION

<b>Power supply</b>	2 x 1,5V AAA
<b>Radio protocol</b>	Z-Wave 5 gen.
<b>Frequency</b>	EU – 868.4 MHz; AS/NZ – 921.4 MHz; US/Canada – 908.4 MHz; RU – 869 MHz; (depending on the version)
<b>Range</b>	Up to 20 m in the building
<b>Working temperature</b>	0 – +40°C
<b>Display</b>	2-digit, 8-section
<b>Weight</b>	0.096 kg
<b>Dimensions</b>	125 x 48 x 16 mm
<b>Remote control operation</b>	12 groups (max. 12 devices); Up to 144 devices in the remote control

## VII. REMOTE CONTROL STRUCTURE

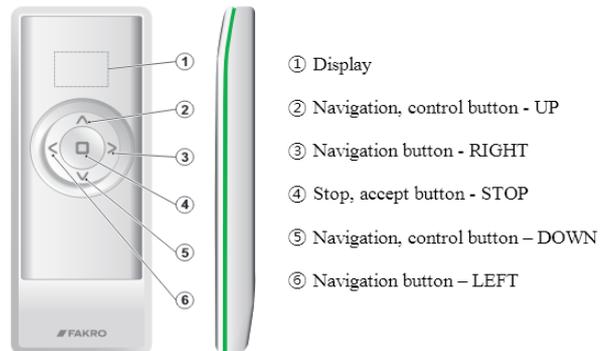

## VIII. ZRH12 MENU

### HOLDING STOP + UP BUTTON FOR 3 SECONDS

- 99** - QUICK START / ADDING DEVICE (QUICK START) - Adding devices both to network and group.
- 89** - ASSOCIATE / ADDING DEVICES TO GROUP.
- 88** - INCLUDE / ADDING DEVICES TO NETWORK.
- 00** - COPY GROUP – Copying groups to other remote controls in the same network.
- 82** - ASSIGN A ROUTE / ASSOCIATING DEVICES – Control signal is sent between associated devices.
- 01** - LISTENING MODE – It enables remote configuration of the remote control from another controller.
- 00** - Back to previous screen.

### HOLDING STOP + DOWN BUTTON FOR 3 SECONDS

- 00** - LEARN MODE – It enables to add the ZRH12 remote control to the network as SECONDARY.
- 88** - DELETE NODE / REMOVING DEVICES FROM GROUP.
- 00** - DELETE GROUP / REMOVING GROUP – It removes the entire selected group.
- 01** - EXCLUDE / REMOVING DEVICE FROM NETWORK.
- 88** - DEFAULT / RESETTING REMOTE CONTROL – It resets settings of the remote control and removes information about devices and network.
- 00** - Back to previous screen.